

Installation Instructions



architecture & design





VARIO




VARIO PLUS



F & W


INSTALLATION INSTRUCTIONS - TOP

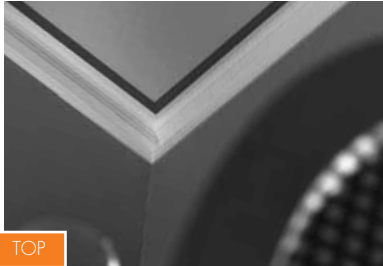

TOP



01

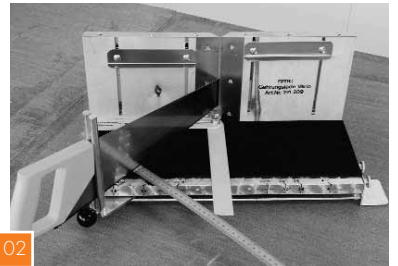

02



03



04



05



06



07



08




09



10



11

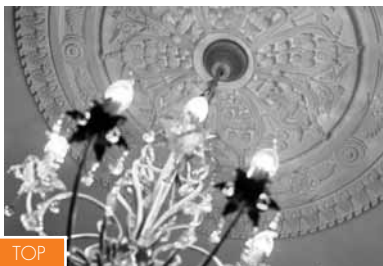

TOP



01



02



03



04



ART DECO



ADEFIX® F & W



ADEFIX® P5

INSTALLATION INSTRUCTIONS - WALL




WALL



01



02

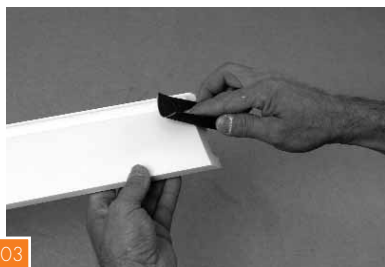

03



04




05

24h

INSTALLATION INSTRUCTIONS - FLOOR




FLOOR

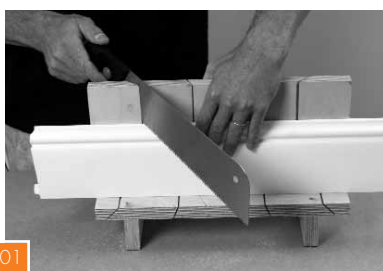

01



02

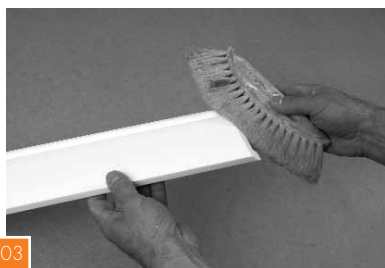

03



04



05



06

